


**TERMINATION AT EXTERNAL
DOOR OPENINGS WPM
750/1000/REPELL
MEMBRANE**

NOTES

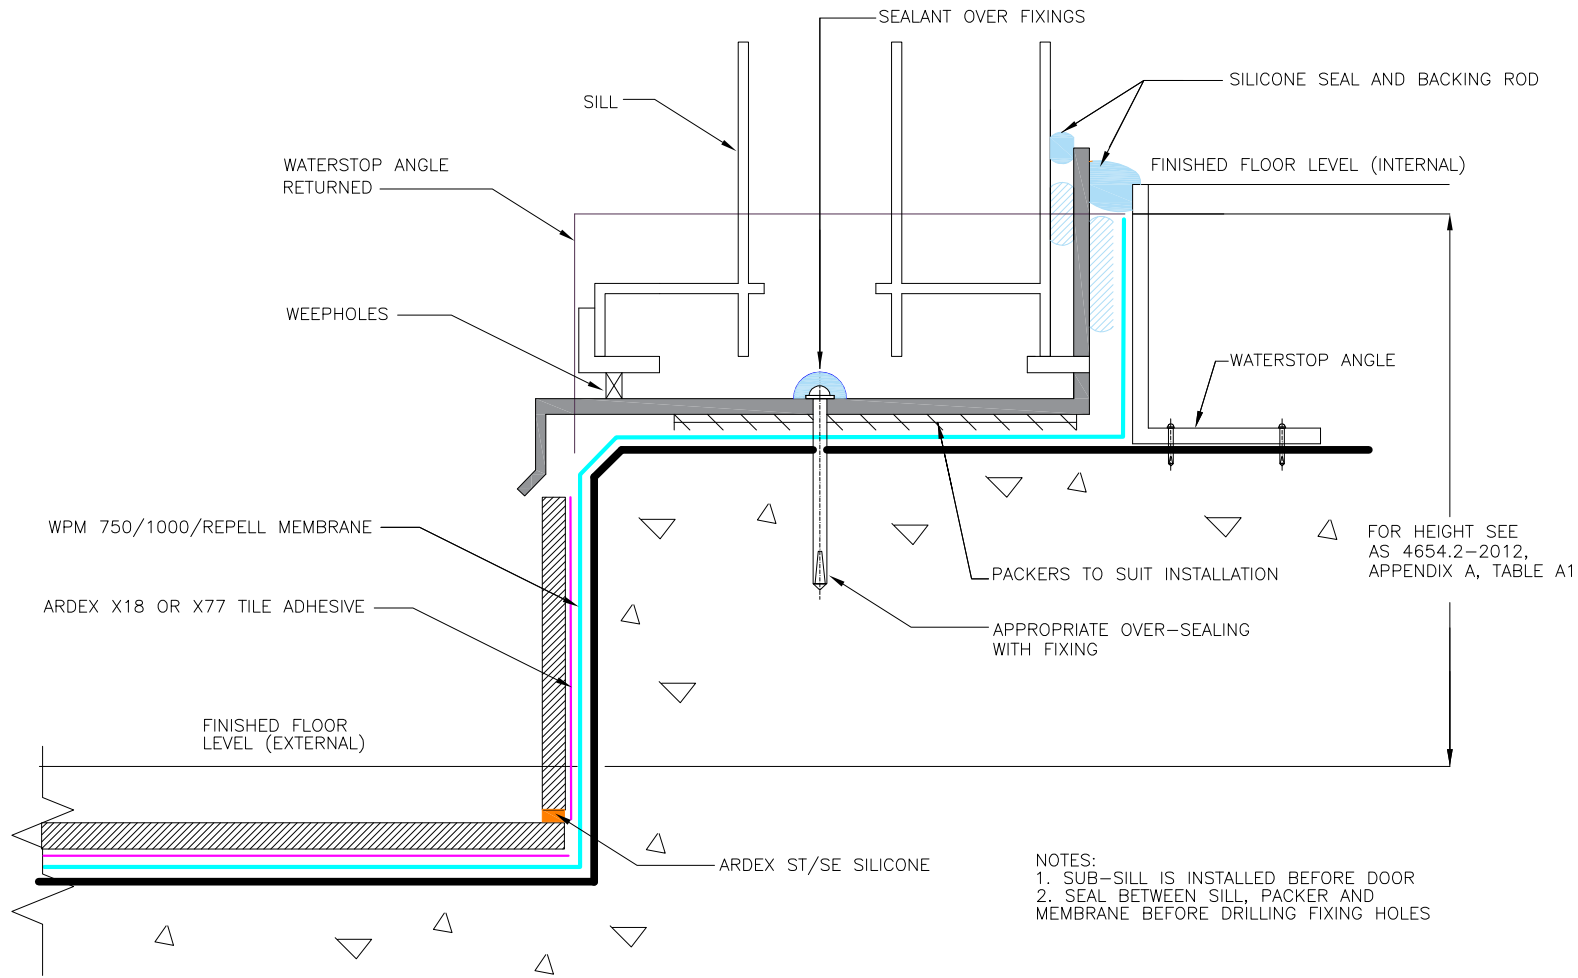

- NOTES:
1. SUB-SILL IS INSTALLED BEFORE DOOR
2. SEAL BETWEEN SILL, PACKER AND
MEMBRANE BEFORE DRILLING FIXING HOLES

NOTE: FOR FALLS, SEE AS 4654.2 - 2012, CLAUSE 2.5.2



The technical details, recommendations & other information contained in this drawing is given in good faith & represents the best of our knowledge and experience at the time of design. It is your responsibility to ensure that our products are used correctly in accordance with any applicable Australian Standard, our instructions & recommendations are only for the uses they are intended. We also reserve the right to update information without prior notice to reflect our ongoing research and development program.

Country specific recommendations, depending on local standards, codes of practice, building regulations and industry guidelines may effect specific installations.

The supply of our products and services are also subject to certain terms, warranties & exclusions which are available to you on request.

FILE NAME	TerminationAtExternalDoorOpeningsWPM7501000Repell
DRAWN	16/8/2016 by MZ
CHECKED	
SIZE	A4

ARDEX AUSTRALIA www.ardexaustralia.com
SCALE NTS
DRAWING CODE TAEDOWPM7501000R